



ASTRO® APX™ O5 Control Head Mobile Radio Quick Reference Card

Product Safety and RF Exposure Compliance




Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

ATTENTION!

This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements. Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 6881095C00) to ensure compliance with RF energy exposure limits.

Radio Controls

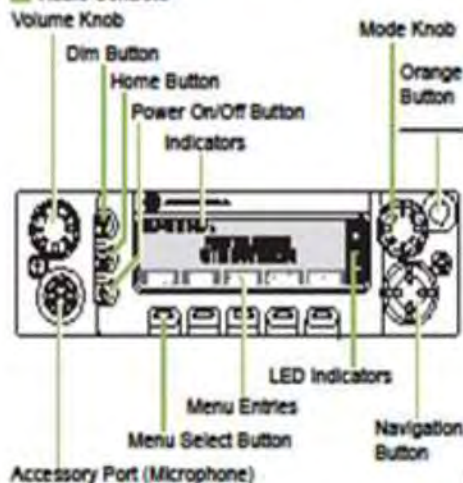

Radio On/Off

Press the Power On/Off button to toggle the power on or off.

Adjusting Volume

Turn the Volume Knob clockwise to increase volume or counterclockwise to decrease the volume.

Selecting a Zone

- 1 $\rightarrow$ or $\leftarrow$ to ZONE.
- 2 $\rightarrow$ or $\leftarrow$ button until the desired zone is displayed.
- 3 Press $\uparrow$ or the PTT button to confirm the selected zone number.
- 4 Press the PTT button to begin transmitting on the displayed zone channel.

Selecting a Channel

- 1 Press and hold $\rightarrow$ to scroll to CHAN and press the Menu Select button directly below CHAN. The display shows the current zone and channel.
- 2 Rotate the Mode knob to the desired channel.
- 3 Press $\uparrow$ or the PTT button to confirm the channel.
- 4 Press the PTT button to transmit on the displayed zone channel.

Receiving and Transmitting

- 1 Take the microphone off hook.
- 2 Select zone/channel.
- 3 Listen for a transmission.
OR
Turn the Volume Knob.
OR
 $\rightarrow$ or $\leftarrow$ to MON then press the Menu Select button directly below MON and listen for activity.
- 4 Adjust volume, if necessary.
- 5 Press the PTT button to transmit; release to receive.

Sending an Emergency Alarm

- 1 Press the Emergency button. A tone sounds and the display alternates EMERGENCY and the home display.
- 2 A dispatcher acknowledgment ACK RECEIVED display follows.
AND, Trunking Only:
A high-pitched tone indicates that the alarm has been received by the trunked system's central controller.
- 3 Press and hold the emergency button or the PTT button to return to normal operation.

To exit emergency at any time, press and hold the Emergency button.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.
© 2009–2011 by Motorola Solutions, Inc. All Rights Reserved. 06/11
1303 East Algonquin Road, Schaumburg, Illinois 60196, U.S.A.



PMLN5592D

English